 


Instruction manual

Carus Adapto

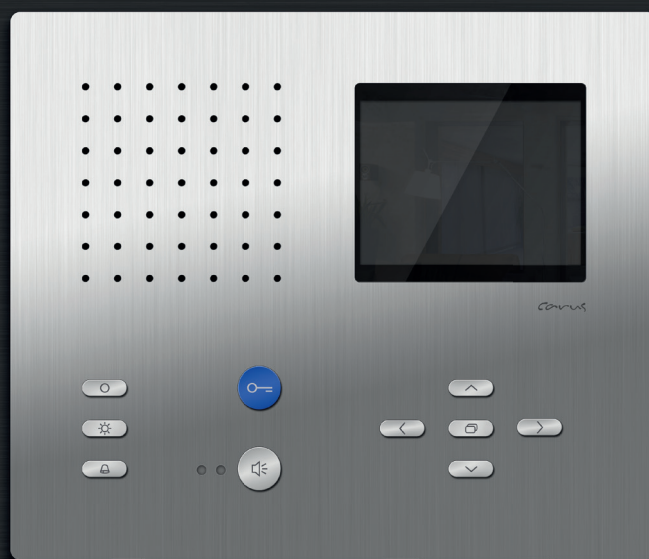

carus
Die Kunst der Kommunikation

Design

"A simple form, a classic layout and high-end materials guarantee timeless aesthetics. The Carus edition reflects the reliability and sustainability of the products in perfect form and sophisticated design. Our emphasis on traditional crafts that we utilise to manufacture the high-quality surfaces, make the Carus products unique items. The harmony between the traditional and the modern element of our products enable us to design customised and first-class products which reflect the user and inspire emotions."

 



reddot design award
winner 2012

DESIGN **PLUS**


powered by: light+building


Your brandnew video indoor station!

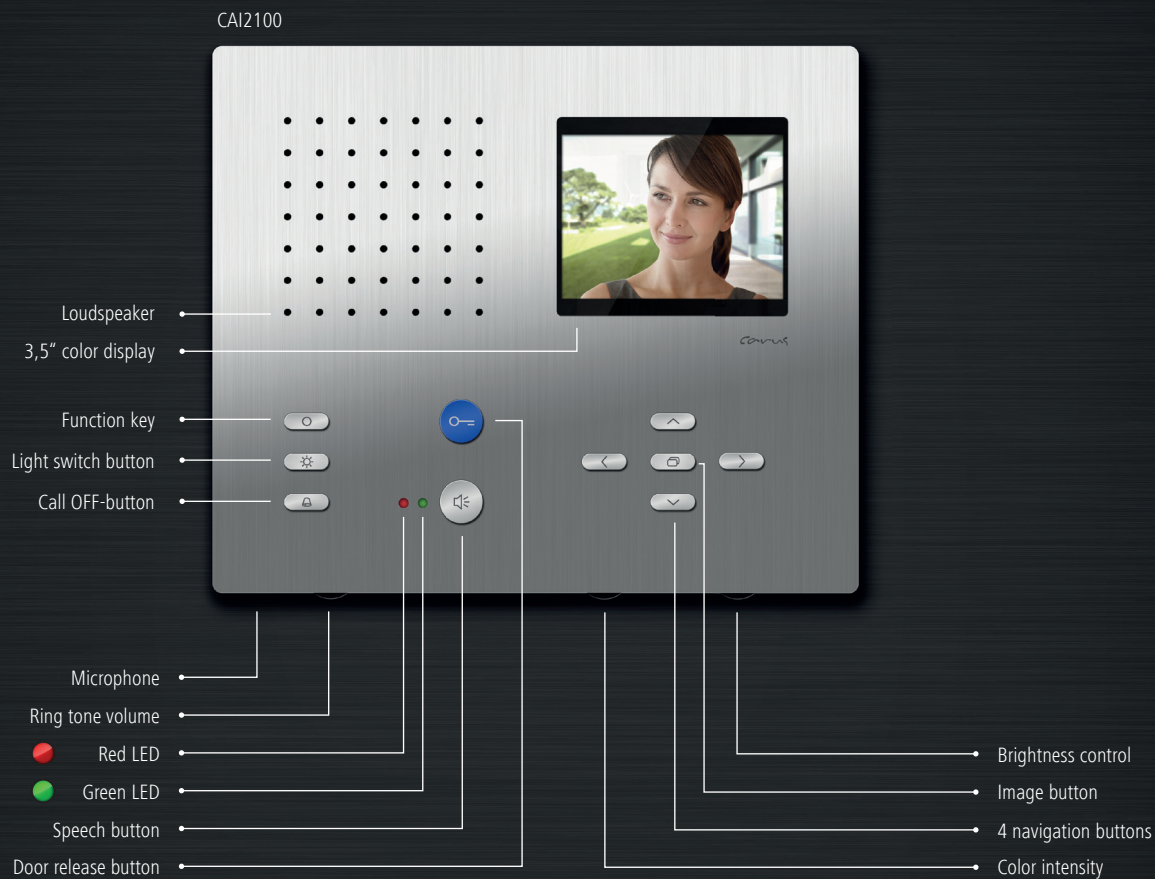


-  **Green LED is on**
 - incoming door or internal call
 - active voice connection
 - activated additional functions

Configurable functions, see page 5.

-  **Red LED is on**
 - Ring tone mute is activated, an incoming call is signalled not acoustically

-  **Red LED blinks**
 - busy speech channel


A ring tone signals an incoming call.

-  The green LED is on.



Speaking

Shortly press the speech button to accept the call or longer than 1 second to switch-over to simplex communication during an active voice connection.

-  The green LED is on.

Shortly press the speech button again or the door release button to end the conversation (the call is terminated after 4 seconds). Automatic call cut-off after 2 minutes.



Door release

Shortly press the blue door release button.



Switching lights

Shortly press the light switch button.



Internal calls / Activate additional functions

Press the function key to call another indoor station or to (de-)activate the call diversion resp. the door release automatic.

Configuration necessary, see page 5.



Ring tone mute

Press the call OFF-button. In case of an incoming call no acoustic signal sounds.


-  The red LED is on.



Image activation

Shortly press the image button to display the image of the front-door station.

Additional functions, page 4.

 


 
4 navigation buttons

With these buttons panning and tilting of a PTZ camera can be realised (left, right, up, down).

Additional functions

 
Video surveillance

Shortly press the image button  to display the image of the front-door station. By pressing again and again further possible cameras can be selected.

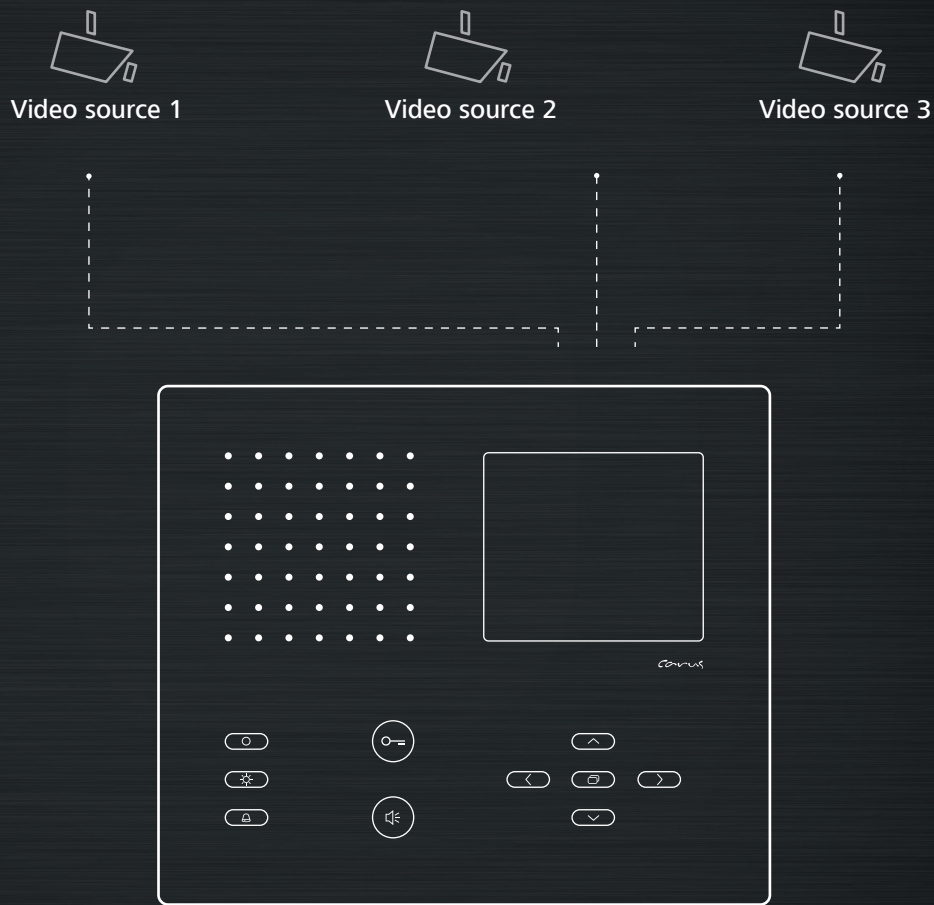


The following functions can be configured on your video indoor station and for the use of further indoor stations. Please contact your qualified electrician.

Call an indoor station (internal call)*



To call another indoor station, press the function key . A short acknowledgement tone sounds if the call has reached its call destination. When the called device accepts the call a voice connection is established. If required, the volume of the voice connection can be adjusted from a qualified electrician.

* max. 1 call destination

Door release automatic


An incoming door call directly triggers the opening of the door if this function is activated. Press the function key 

→ activated,

 the green LED is on, press the function key  again

→ deactivated


Open the floor door

If the floor door call at the floor door is triggered, the floor door (instead of the front-door) can be opened with the door release button  within 30 seconds.



Parallel call

A second indoor station sounds simultaneously in case of an incoming door, floor or internal call. the ring tone sounds at both devices.

Call diversion

The incoming call is diverted to a second indoor station. Press the function key 

→ activated,

 the green LED is on, press the function key  again

→ deactivated

Setting ring tone volume | color saturation | brightness

With the three controller at the bottom of the device, the ring tone volume as well as color saturation and brightness of the video image can be adjusted continuously.



Ring tones can be adjusted for four different call types.

Thus, it is possible to distinguish calls from two different front-door stations, a floor call or an internal call.

 
You can choose between 13 different ring tones. Proceed as follows:

1. Activate the ring tone selection

End an eventually existing conversation. Press the call OFF-button for at least 8 seconds.


→ An acknowledgement tone sounds.

2. Select a door ring tone a... from the (first) front-door station

Press the door release button  until the desired ring tone sounds.


The ring tone selected last will be stored.

b ... from the second front-door station*


Press the speech button  until the desired ring tone sounds. The ring tone selected last will be stored.

* If no separate ring tone is selected, the ring tone of the first front-door station is stored automatically.

 
c... from the floor door

Press the light switch button  until the desired ring tone sounds. The ring tone selected last will be stored.

d... from another indoor station

 
Press the function key  until the desired ring tone sounds. The ring tone selected last will be stored.

3. Deactivate the ring tone selection

To end the ring tone selection shortly press the call OFF button  once.

When no button is pressed within the next 8 seconds, the device ends the ring tone selection automatically. The ring tone selection ends with an acoustic signal.

Cleaning

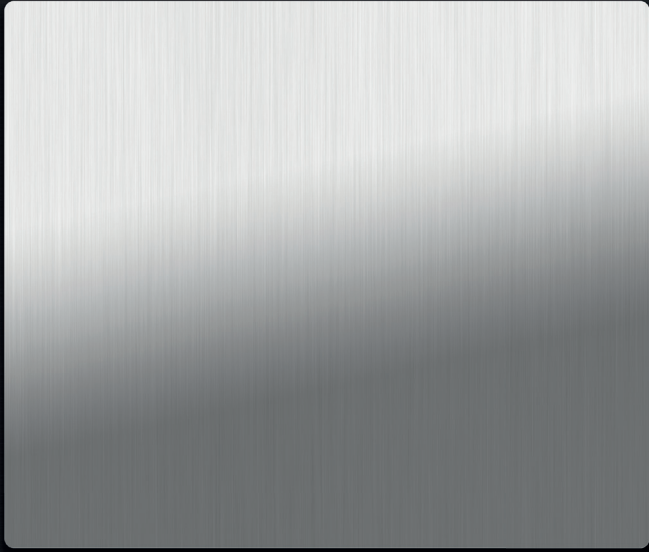

Clean the indoor station with a dry or slightly wet cloth. Remove stronger stains with a PH-neutral detergent.

Avoid water from entering the device! Do not use any abrasive detergents!

3 years warranty

carus

a brand of TCS AG

Design Manufaktur Adelheid
Adelheid 41
78098 Triberg
Germany

info@carus-concepts.com

www.carus-concepts.com

Tel: +49 7722 91770

Fax: +49 7722 917718

- Art. no. 0035868 Version 1 A -